

TR-STM801 说明书 size: 145*205m

Recharge power bank

desktop/laptop USB port
micro USB input recharge
battery level LEDs
USB-AC charger (not included)
USB plug
micro USB plug

Check battery level

LEDs lit	battery level
● ● ● ●	100%
● ● ● ○	75%
● ● ○ ●	50%
● ○ ○ ●	25%
○ ○ ○ ○	0%

Plug fan to power bank (handle)

USB plug (fan)
USB port (power bank "handle")

desktop fan direct power from USB source

desktop/laptop USB port
micro USB power IN
USB-AC charger (not included)
USB plug
micro USB plug

Fan ON > speed > OFF

hand-held > desktop fan

detach power bank "handle"

1. press down release buttons
2. pull out

use only AC-USB charger with 5V~5.5Vmax DC!
if power bank is heated, unplug from charger immediately!

充电宝充电

台式 / 笔记本 USB 口
Micro USB 输入
电量指示灯
USB 头
Micro USB 头
充电器 (不含在配件内)

风扇开 > 风速 > 风扇关

手持风扇转变为台式风扇

拆下手柄充电宝

向下按解锁键
向外拉

台式风扇充电

台式 / 笔记本 USB 口
Micro USB 输入
USB 头
Micro USB 头
充电器 (不含在配件内)

电量指示

LED 灯显示	电量
● ● ● ●	100%
● ● ● ○	75%
● ● ○ ●	50%
● ○ ○ ●	25%
○ ○ ○ ○	0%

充电宝风扇接口

风扇 USB 接口
充电宝 USB 接口

仅使用 5V-5.5V 最大直流的 AC-USB 充电器!
如果充电手柄发热, 请终止充电!